



Diagnostic Microprocessor Control

Supplemental Owner's manual



US HEADQUARTERS
831 SOUTH FIRST ST.
P.O. BOX 32270
LOUISVILLE, KY. 40232-2270

PHONE: (502) 587-1292
FAX: (502) 585-3625

DIAGNOSTIC MICROPROCESSOR CONTROL - FEATURES

Diagnostic Microprocessor Control (DMP)

1.0 General Operation

The Cissell Diagnostic Microprocessor Control (DMP) is designed to manage the drying and cooling cycles of the dryer. The controller is also programmed from the the factory with five different default programs as described below. The operator has the flexibility to select the time for the drying and cool down cycles and the drying temperature. The operator may also select either reversing or non-reversing basket action only if the dryer is equipped for reversing. The operator may also re-program the default programs. See paragraph 4.0.

Default Programs

| <u>Programs</u> | <u>Dry Time</u> | <u>Cool Time</u> | <u>Temp. Set Point</u> | <u>Reversing</u> |
|-----------------|-----------------|------------------|------------------------|------------------|
| 1-TOWELS | 40 Minutes | 5 Minutes | 185/195°F (85/91°C) | No |
| 2-SHEETS | 30 Minutes | 5 Minutes | 165°F (74°C) | Yes |
| 3-MISC-1 | 30 Minutes | 5 Minutes | 150°F (66°C) | No |
| 4-MISC-2 | 25 Minutes | 5 Minutes | 135°F (57°C) | Yes |
| 5-EXTRA DRY | 5 Minutes | 2 Minutes | 150°F (66°C) | No |

Note: If an altered program is determined to be corrupted, the default program settings will be used.

2.0 Features

1. Drying time: 0-60 minutes
2. Cooling time: 2-60 minutes
3. LED display of cycle time, set temperature, and actual temperature
4. Thermistor controlled temperature
5. Safety tumble cycle
6. Buzzer for end of cycle, audible alarm
7. Reversing/Non-reversing selection
8. Five user programmable programs
9. RPM display - (when equipped with rotational sensor only)
10. Monitors the sail switch operation
11. Monitors the lint door switch operation
12. Monitors the thermistor for operation

The minimum drying time is 0 minutes, and the minimum cooling time is 2 minutes. The maximum drying or cooling time is 60 minutes. The drying temperature may be set from 100°F (38°C) to 185/195°F (85/91°C). The drying time, cooling time, or temperature may be modified during an operating cycle.

If it is necessary to reset the drying and cooling times for the current cycle, press STOP once to stop the dryer. Press STOP again to cancel the cycle.

If it is necessary to change programs during a current cycle, press STOP once to stop the dryer and press STOP again to cancel the current cycle

Diagnostic Microprocessor Control (DMP)

3.0 DIP Switch Settings

The DMP has an 8-position DIP switch bank that is accessible from the back of the control board. By switching these DIP switches, it is possible for the operator to customize the display and some of the operating features of the dryer.

| Switch # | Function | OPL | Coin | | | | | | | | | | | | | | | | |
|----------|-------------------------------------------------|------------------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|----|-----------|-----|----|---------------|-----|-----|------------------|----|----|------------|----|-----|-----|
| 1 | Dryer Type | OFF | ON | (OPL=Off; Coin=On) | | | | | | | | | | | | | | | |
| 2 | Temperature Units | OFF | OFF | (°F=Off; °C=On) | | | | | | | | | | | | | | | |
| 3 | Local / Remote Reversing | ON | ON | (Local=On; Remote=Off) | | | | | | | | | | | | | | | |
| 4 | Sail Switch | OFF | OFF | (Enable=Off; Disable=On) | | | | | | | | | | | | | | | |
| 5 | Lint Door Switch | OFF | OFF | (Enable=Off; Disable=On) | | | | | | | | | | | | | | | |
| 6 | Buzzer Timer | ON | ON | (5 Sec=Off; Continuous=On) | | | | | | | | | | | | | | | |
| 7 | Safety Tumble (OPL) or Coin Count/Pay (Coin) | ON | OFF | <table><tr><td>#1</td><td>#7</td><td>DIPSWITCH</td></tr><tr><td>OFF</td><td>ON</td><td>SAFETY TUMBLE</td></tr><tr><td>OFF</td><td>OFF</td><td>NO SAFETY TUMBLE</td></tr><tr><td>ON</td><td>ON</td><td>COIN COUNT</td></tr><tr><td>ON</td><td>OFF</td><td>PAY</td></tr></table> | #1 | #7 | DIPSWITCH | OFF | ON | SAFETY TUMBLE | OFF | OFF | NO SAFETY TUMBLE | ON | ON | COIN COUNT | ON | OFF | PAY |
| #1 | #7 | DIPSWITCH | | | | | | | | | | | | | | | | | |
| OFF | ON | SAFETY TUMBLE | | | | | | | | | | | | | | | | | |
| OFF | OFF | NO SAFETY TUMBLE | | | | | | | | | | | | | | | | | |
| ON | ON | COIN COUNT | | | | | | | | | | | | | | | | | |
| ON | OFF | PAY | | | | | | | | | | | | | | | | | |
| 8 | Programming | OFF | OFF | (Disable=Off; Enable=On) | | | | | | | | | | | | | | | |

Dip Switch Functions Explained

- #1 Dryer Type: This DIP switch selects the type of dryer, i.e. OPL or Coin.
- #2 Temperature Units: Selects °F or °C for the temperature display. Factory setting is for °F.
- #3 Local/Remote Reversing: Preset at the factory; usually for local reversing. Remote reversing for use with Cissell part # TU12874, Reversing Timer Board only.
- #4 Sail Switch: Preset at the factory; usually set for the sail switch to be monitored.
- #5 Lint Door Switch: Preset at the factory; usually set for the lint door switch to be monitored.
- #6 Buzzer Timer: This DIP switch determines the length of time that the end of cycle buzzer will remain on. "OFF" indicates that the buzzer will sound for 5 seconds when the drying cycle is completed. "ON" indicates that the buzzer will sound continuously until the "STOP" button is pressed, or the loading door is opened.
- #7 Safety Tumble, Display Count, or Pay: If DIP Switch #1 is set for OPL, then DIP switch #7 in the "ON" position enables the safety tumble. If DIP Switch #1 is set for Coin, then DIP switch #7 in the "ON" position enables the display of the coin count. DIP switch #7 in the "OFF" position enables the display of "PAY", to indicate that coins are needed to run the dryer.
- #8 Programming: This switch enables or disables the programming feature and should normally be in the "OFF" position.

DIAGNOSTIC MICROPROCESSOR CONTROL - FEATURES

4.0 Programming

- 4.1 Set Dip Switch #8 to the "ON" position.
- 4.2 Select the desired program number to change. The LED should be flashing.
- 4.3 Select DRY TIME. Set the time with the UP/DOWN arrows.
- 4.4 Select COOL TIME. Set the time with the UP/DOWN arrows.
- 4.5 Select TEMPERATURE. Set the temperature with the UP/DOWN arrows.
- 4.6 Select reversing REV (illuminated) or non-reversing REV (not illuminated). To change basket direction and dwell time, see section 6.0 *Reversing Operation*.
- 4.7 Press and hold the PROGRAM select button about 3 seconds until the LED stops flashing. The selected program number is now programmed. If the PROGRAM button is pressed for less than 3 seconds, the controller will cancel the program and display the next program's settings. If not programmed correctly, the display will flash "E2F" for 4 seconds, and the default settings will be used. Follow steps 4.2 through 4.7 to re-program any program number. When finished, set DIP Switch #8 to "OFF." The programs are now stored.
- 4.8 During the program mode, if the UP/DOWN arrows, REV, or DISPLAY button is not pressed within 10 seconds the default program settings will be used.

5.0 Temporary Re-Programming of Current Programs (OPL only)

- 5.1 The Drying Time, Cooling Time, Temperature, and Reversing Mode of a program currently in use may be modified simply by adjusting any or all of the program parameters for that program, as needed. Once a modification has been made the current program LED will flash indicating that it has been modified.
- 5.2 Use the UP/DOWN arrows to adjust program time.
- 5.3 Use the Display Select button to choose between Drying Time, Cooling Time, and Temperature. Then use the UP/DOWN arrows to adjust the times and temperature.
- 5.4 Toggle between reversing REV (illuminated) or non-reversing REV (not illuminated). * Only for dryers with the reversing option.
- 5.5 To cancel this temporary programming mode push the "STOP" button once to stop the current cycle and once more to cancel the modified program settings. The program will revert back to its original settings.

6.0 Reversing Operation

- 6.1 When the LOCAL reversing operation is selected, the reversing times are stored in the EEPROM which is located on the controller board. If the values stored are determined to be invalid the clockwise and counter-clockwise times will default to 60 seconds, and the dwell time will default to 4 seconds.
- 6.2 The reversing time program has the following sequence: (1) clockwise time, (2) dwell time, and (3) counter-clockwise time.
- 6.3 To program new reversing times DIP switches #3 and #8 must be on.
- 6.4 Press and hold the reverse button (REV) for 3 seconds to display the clockwise time.
- 6.5 Use the UP/DOWN arrows to set the clockwise time within the range of 30-120 seconds.
- 6.6 Press REV to display the dwell time.
- 6.7 Use the UP/DOWN arrows to change the dwell time within the range of 3-10 seconds.
- 6.8 Press the REV button to display the counter-clockwise time.
- 6.9 Use the UP/DOWN arrows to change the counter-clockwise time within the range of 30-120 seconds.
- 6.10 Press the REV button to save these settings and leave DIP Switch #3 in the "ON" position and flip DIP Switch #8 to the "OFF" position.

When the DMP controller is retrofitted to an existing dryer with the reversing feature, off board reversing will be required and DIP Switch #3 on the DMP must be in the "OFF" position and the DMP must be connected to the Reversing Timer Board, Cissell part # TU12874 for proper operation. The DMP settings for clockwise, dwell, and counter-clockwise times are no longer valid when used with the Reversing Board. Instead these settings are made on the Reversing Timer Board.

DIAGNOSTIC MICROPROCESSOR CONTROL - FEATURES

7.0 Rotation Sensor

The rotation sensor must “read” the key on the basket shaft. The sensor must be set approximately 1/4" from the key. Look for the light on the sensor to come on as the key passes the sensor; this is a correctly operating sensor. If no light appears either the sensor is out of range of the key or the sensor is bad. In addition, if the light stays on continuously then the sensor is too close to the shaft or the sensor is bad.

7.1 Safety Tumble/Anti-Wrinkle

At the end of the cooldown cycle, the dryer will stop and display “END.” The DMP control will automatically rotate the basket for 5 seconds every 2 minutes for a total of 20 minutes, until some function of the dryer is activated/deactivated by the user.

8.0 Operational Check for the Board Diagnostics

- 8.1 “dor” indicates that the loading door is open.
- 8.2 “ldr” indicates that the lint door is open.
- 8.3 Cycle the dryer to check if the buzzer activates.
- 8.4 “P-F” indicates that the thermistor is short circuited or open circuited.
- 8.5 Hold the sail switch shut for a few seconds during start up -- Display reads “FSS.” To clear the display, release the sail switch to normal operation, press STOP then press START.
- 8.6 Hold the sail switch open during operation for more than 3 seconds -- Display reads “FSS.” To clear the display, release the sail switch to normal operation, press STOP then press START.
- 8.7 “bbt” indicates a broken belt condition or a faulty rotation sensor. * Only available on dryers with the rotation sensor.
- 8.8 Hold the START button to display the drum RPM's; the display will read “r##” where ## are the RPM's. * Only available on dryers with the rotation sensor.
- 8.9 “cln” indicates that the lint door has not been opened within 10 hours of operation.
- 8.10 “cln” is displayed and the dryer will not start if the lint door has not been opened before 20 hours of operation.

9.0 Description of the OPL Control Panel (See illustration on page 7)


- 1. **START.** Starts or resumes the current program or cycle.
- 2. **STOP.** Temporarily halts the current cycle or cancels the current program.
- 3. **REVERSING/NON-REVERSING (REV).** Changes the selection between reversing and non-reversing dryer action.
- 3.1 **REVERSING LED.** Illuminated when set for reversing.
- 4. **UP/DOWN ARROWS.** Increases or decreases the value in the display. In conjunction with the DISPLAY button, these buttons are used to adjust the drying time, cooling time, temperature, clockwise time, dwell time, counter-clockwise time, and minutes per coin (COIN only).
- 4.1 **DISPLAY.** Displays the drying time, cooling time, drying temperature, and diagnostic codes.
- 5. **DISPLAY SELECT.** Toggles the display between the drying time, cooling time, and temperature settings. Pressing the DISPLAY button for 3 seconds allows the user to display the drying cycle temperature.
- 5.1 **DRYING LED.** Illuminated when in the drying cycle.

DIAGNOSTIC MICROPROCESSOR CONTROL - FEATURES

(Description of OPL Control Panel Continued)

- 5.2 **COOLING LED.** Illuminated when in the cooling cycle, or when the display is currently showing the time for the cooling cycle.
- 5.3 **TEMPERATURE LED.** Illuminated when the display is showing the temperature setting.
- 6. **PROGRAM SELECT.** This button toggles through the five user programmable programs. Holding this button will save a program, as indicated in section 4.7.
- 6.1 **USER PROGRAM LEDS.** Illumination shows which user program is currently being displayed.

DIAGNOSTIC MICROPROCESSOR CONTROL - DETAILS OF OPL CONTROL BOARD

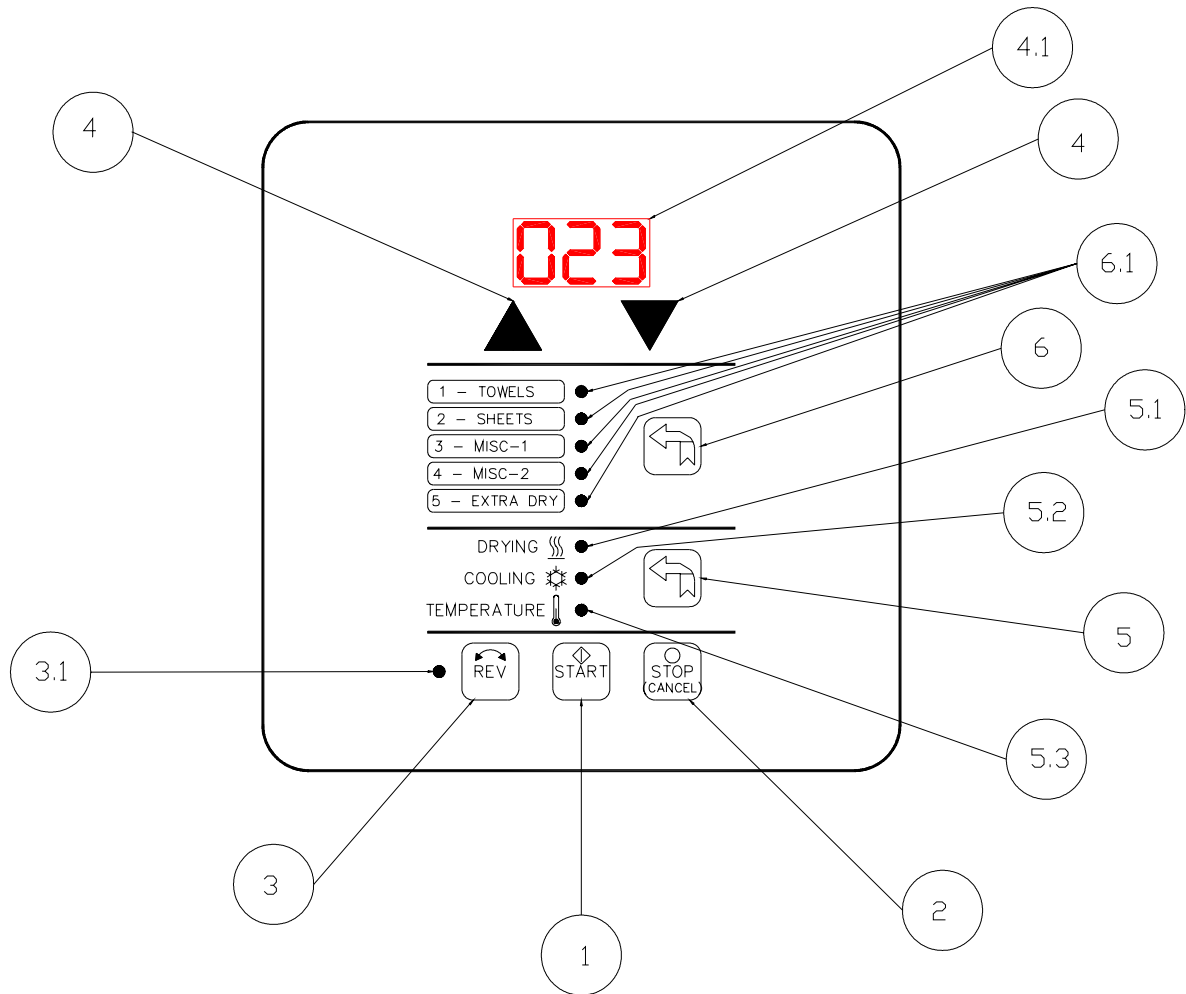

DIAGNOSTIC MICROPROCESSOR CONTROL - COIN FEATURES

10.0 Coin Keypad Interface

- START button to start or resume a cycle.
- TEMPERATURE button to select HIGH, MEDIUM, or LOW temperature.
- Two hidden buttons to increment or decrement the programmable time and temperature options.

11.0 Power-Up

Upon applying power to the dryer, the display will show "PAY" and the DRYING and COOLING LEDs will be off until coins are deposited to increase the dryer run time. When time is displayed, the default (LOW) temperature setting LED will be on until a different temperature setting is selected.

12.0 Power Failure

If a power loss occurs during operation, a cycle will not resume until the START button is pressed. To cancel the remaining cycle, press the internal CLEAR button.

13.0 Coin Operation

The dryer run time is determined by the pre-programmed run time per coin and the number of coins deposited into the dryer. The maximum time that can be accumulated and displayed is 99 minutes. The drying time is the difference between the run time and the cooling time. The cooling time is pre-programmed to be 2 to 5 minutes. The drying temperature can be selected from LOW, MEDIUM, or HIGH temperature settings by pressing the TEMPERATURE button.

14.0 Coin Programming

- 14.1 The Coin board programming mode can only be entered when "PAY" is displayed. DIP switch #7 must be in the off position.
- 14.2 Programming is enabled by setting DIP switch # 8 to the ON position.
- 14.3 The programming mode is entered by pressing and holding the CLEAR button for three seconds.
- 14.4 The programming follows the following parameter order:
 - 1. Dryer run time per coin (DRYING), COOLING time, HIGH temperature setpoint, MEDIUM temperature setpoint, LOW temperature setpoint.
 - 2. An LED will be on to indicate which parameter is flashing on the display.
 - 3. The hidden front panel increment and decrement keys are used to change the value.
 - 4. The CLEAR button is used to recall the default value.
 - 5. The START button is used to step to the next parameter.
 - 6. After the last parameter, "End" will be flashing.
 - 7. Press the START button one last time to store the settings and exit the program mode.
 - 8. "PAY" will be displayed.
 - 9. If it is determined that the data did not program correctly, the error message "E2F" will flash for 4 seconds, and then the default coin parameters will be used.
- 14.5 The dryer run time per coin is programmable from 1 to 20 minutes with the default preset to 10 minutes.
- 14.6 The cooling run time is programmable from 2 to 5 minutes with the default preset to 2 minutes.
- 14.7 The three temperatures setpoints are programmable from 100°F (38°C) to 185/195°F (85/90°C) with the following default settings:
 - HIGH equal to 185°F (85°C)
 - MEDIUM equal to 150°F (66°C)
 - LOW equal to 135°F (57°)

DIAGNOSTIC MICROPROCESSOR CONTROL - COIN FEATURES

15.0 **Stop**

When in the Coin mode, the dryer will stop if the dryer door is opened while the dryer is running. If the CLEAR button, located behind the board, is pressed, the dryer will stop, the dryer time is zeroed and the display will show "PAy."

16.0 **Coin Count**

- 16.1 The unit will count the number of coins deposited.
- 16.2 Setting DIP switch # 7 to the ON position will display the coin count since it was last reset.
- 16.3 To reset the count, press the CLEAR button and "00" will be displayed.
- 16.4 If the count is greater than "999," the display will flash "999."
- 16.5 Setting DIP switch # 7 to the OFF position will return the display to "PAy."

17.0 **Description of Coin Control Panel** (See illustration on page 10)

1. **START.** Starts or resumes the current program or cycle.
2. **HIDDEN KEYS.** Used for programming in the coin mode - increases or decreases the value in the display. In conjunction with the START button, these buttons are used to adjust the drying time, cooling time, temperature, clockwise time, dwell time, counter-clockwise time, and minutes per coin.
3. **DISPLAY.** Displays the drying time, cooling time, drying temperature, and diagnostics.
4. **DRYING LED.** Illuminated when in the drying cycle.
5. **COOLING LED.** Illuminated when in the cooling cycle, or when the display is currently showing the time for the cooling cycle.
6. **TEMPERATURE LED.** Indicates temperature setting.
7. **TEMPERATURE SELECT.** This button toggles through the three temperature selections.
8. **INSTRUCTIONS.** Instructions to start a drying cycle.
9. **CLOCK SYMBOL.** This symbol of a clock indicates that the time in the display is counting down to zero.

DIAGNOSTIC MICROPROCESSOR CONTROL DETAILS OF COIN CONTROL BOARD

